



Table of Contents

1	Important and general information	3
1.1	Important information	3
1.1.1	Safety and Warning instructions	3
1.2	Terms and conditions	4
1.2.1	Legend of used icons	4
1.2.2	Support	4
2	PlugIn Overview	5
2.1	PlugIn description	5
2.2	PlugIn Installation	5
2.3	Operating systems	5
3	PlugIn configuration	6
3.1	Connecting Bus coupler to PC	6
3.2	Supported Interfaces	6
3.2.1	BK Bus Couplers - based on Modbus TCP	6
3.2.2	EtherCAT - based on ADS and R3IO	6
3.3	Creating a BK system	7
3.4	Configuring coupler interface parameters	7
3.4.1	Entering IP address of coupler	7
3.4.2	Enable / disable watchdog	8
3.4.3	Fast Mode (only for coupler BK9000)	9
3.5	Automatic reconnect to the bus coupler	9
3.6	Adding IO terminals to the coupler	10
3.7	Removing vs Deactivating IO Terminals	11
3.8	Channel Scaling	12
3.9	Supported KL IO Terminals	12
3.10	Configure generic IO terminals – Example KL 3172	13
3.11	Configuration information for special terminals	16
3.11.1	Terminal KL 3362 – Oscilloscope terminal	16
3.11.2	Terminal KL 3222 – Resistance measurement (Ohm)	19
3.11.3	Terminal KL 3311 – Thermocouple measurement	19
3.11.4	Terminal KL 1512 – 16 bit counter input	20
3.11.5	Application example Pulse counting – Flow Rate & Volume totalizer	20
4	EtherCAT interface	23
4.1	System architecture	23
4.2	TwinCAT - Beckhoff CPU configuration	23
4.3	TwinCAT – Task configuration	24
4.4	Supported EtherCAT IO Terminals	25
4.4.1	Adding generic IO terminals – from template terminals	25
5	Starting Measurement	26

1 Important and general information

1.1 Important information

Please follow these instructions before and during the use and application on any IPETRONIK product!

1.1.1 Safety and Warning instructions

Please follow the instructions **and** information as contained in the user manual!

1. The user can **influence an electronic system by applying the IPETRONIK product**. This might cause risk of personal injury or property damages.
2. The **use and application of the IPETRONIK product is permitted only to qualified professional staff**, as well as, only in appropriate manner and in the designated use.
3. **Before using an IPETRONIK measurement system in the vehicle it has to be verified that no function of the vehicle, which is relevant for secure operation, might be influenced:**
 - by the installation of the IPETRONIK measurement system in the vehicle,
 - by an potential malfunction of the IPETRONIK system during the test drive.

In order to avoid possible danger or personal injury and property damages, appropriate actions are to be taken; such actions have to bring the entire system into a secured condition (e.g. by using a system for emergency stop, an emergency operation, monitoring of critical values).

Please check the following points to avoid errors:

- Adaption of sensors to components of the electrical system / electronics, brake system, engine and transmission control, chassis, body.
- Tap of one or several bus systems (CAN, LIN, ETHERNET) including the required electrical connection(s) for data acquisition.
- Communication with the vehicle's control units (ECUs), especially with such of the brake system and/or of the engine and transmission control (power train control system).
- Installation of components for remote data transmission (mobiles, GSM/GPRS modems, WiFi and Bluetooth components).



The products can be operated in extended temperature ranges greater 70 °C and therefore the operator has to take safety measures to avoid any skin burnings on hot surfaces while touching the products.

4. **Before directly or indirectly using the data acquired by an IPETRONIK measurement system to calibrate control units, please review the data regarding to plausibility.**
5. With regard to the application of IPETRONIK products in vehicles during use on public roads the manufacturer and/or registered user of the vehicle **has to ensure that all changes/modifications have no influence concerning the license of the vehicle or its license of operation.**
6. **User does agree to the instructions and regulations as mentioned above.** In case the user does not agree with the instructions and regulations as mentioned above, he has to notify this expressly and immediately in writing to IPETRONIK before confirming the sales contract.

1.2 Terms and conditions

See IPETRONIK website for details: <https://www.ipetronik.com/>

1.2.1 Legend of used icons

**Tip**

This icon indicates a useful tip that facilitates the application of the software.

**Information**

This icon indicates additional information for a better understanding.

**Attention!**

This icon indicates important information to avoid potential error messages.

1.2.2 Support

Headquarter:**IPETRONIK GmbH & Co. KG**

Im Rollfeld 28

76532 Baden-Baden, Germany

Phone +49 7221 9922 0

Fax +49 7221 9922 100

info@ipetronik.com

www.ipetronik.com

Limited commercial partnership with its head office in Baden-Baden, registry court HRA No. 201313

IPETRONIK Verwaltungs-GmbH Baden-Baden is an individually liable society, registry court Mannheim HRB No. 202089

CEOs: A. Wocke, C. Buchholz

Technical support and product information

www.ipetronik.com

e-mail: support@ipetronik.com


2 PlugIn Overview

2.1 PlugIn description

With the Beckhoff PlugIn you can access Modbus couplers and in limited scope EtheCAT R3IO interfaces and bus terminals.

2.2 PlugIn Installation

In order to use the PlugIn together with IPEmotion you need to install it. The PlugIn is available for download from the IPETRONIK website: <https://www.ipetronik.com/> When you have installed the PlugIn, you need to launch the IPEmotion software. Then you need to access the application menu and open the OPTIONS. In the OPTIONS you can activate the PlugIn as indicated below.

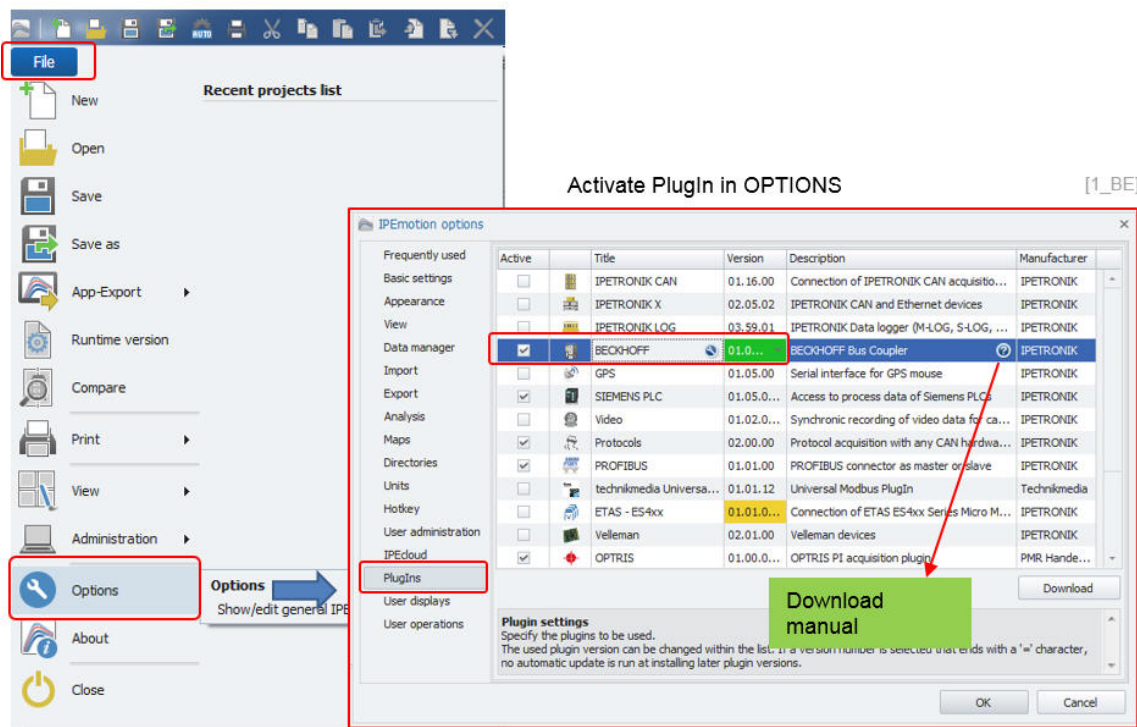

2.3 Operating systems

The PlugIn is supporting the following Windows operating systems:


- ▶ 32 bit

3 PlugIn configuration

3.1 Connecting Bus coupler to PC

In the first step, an Ethernet connection between bus coupler and the PC with the IPEmotion software should be established. The coupler requires 24 Volt DC power supply. Please refer to the Beckhoff help manual for information on how to wire up the power input. In case you are using a direct connection between bus coupler and PC, a cross over cable is recommended. If you are using a direct connection, the computer and the coupler both need a static IP-address.

If the coupler and the PC are communicating over a network (Switch), a standard LAN cable is required. In a network environment, the computer does not necessarily need to have a static IP-address.

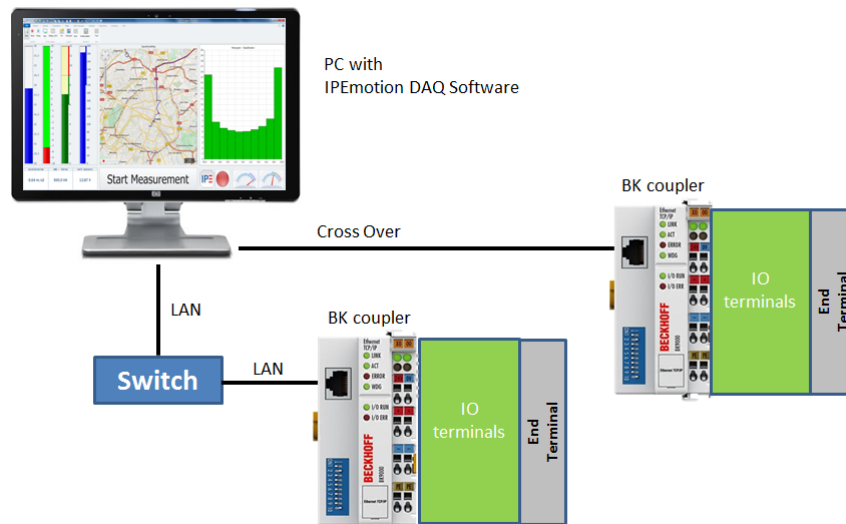

[2]

3.2 Supported Interfaces

3.2.1 BK Bus Couplers - based on Modbus TCP

The PlugIn supports Beckhoff bus couplers based on Modbus TCP protocol. Users only deal with the configuration of the bus coupler and the IO terminals. All the details about Modbus address configuration are done automatically by the PlugIn. The PlugIn can communicate with the Beckhoff BK bus couplers without any additional Beckhoff driver or software installation.

The supported interface devices are:

- ▶ BK9000
- ▶ BK9050
- ▶ BK9100


These BK bus couplers support (KL) K-Bus IO terminals only.

3.2.2 EtherCAT - based on ADS and R3IO

The PlugIn also supports the ADS and the R3IO interfaces. These interfaces are suitable for configuring a communication to the Beckhoff PLC system for (EL) EtherCAT IO terminals. For the communication over ADS or R3IO interfaces the Beckhoff TwinCAT System Manager must be installed together with IPEmotion and the PlugIn.

3.3 Creating a BK system

In order to setup a system, the Beckhoff PlugIn needs to be selected in the SIGNALS tab sheet. After selecting the PlugIn, you need to select the interface/bus coupler you would like to use for your measurement application. The selected bus coupler model in IPEmotion has to match with the coupler you use for your application.

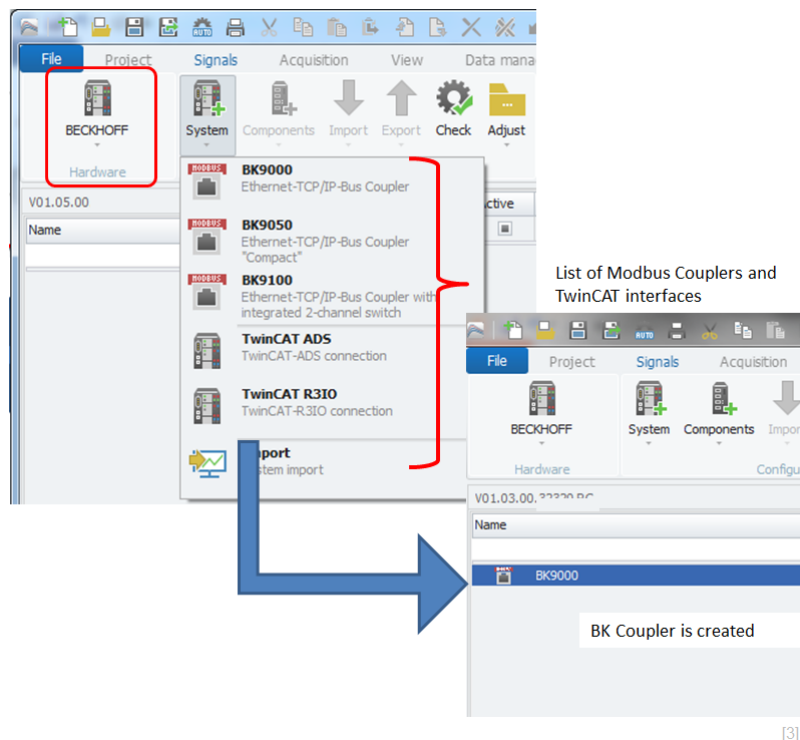

[3]

In our example, the coupler BK9000 will be used. Several BK or TwinCAT systems can be created if needed.


3.4 Configuring coupler interface parameters

The next important step is to configure the interface parameters which consist of the following options:

- ▶ IP-address of the coupler
- ▶ Enable / disable Watchdog
- ▶ Fast Mode (supported only for coupler BK9000)

3.4.1 Entering IP address of coupler

The IP address is entered in the connection parameters tab sheet.

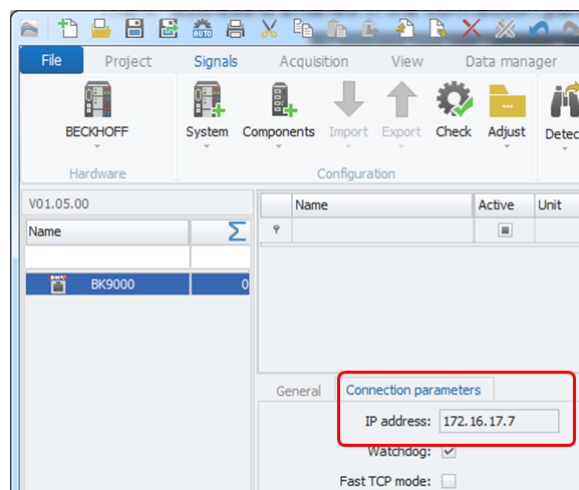

Enter IP of Coupler

[4]

The factory default IP address is 172.16.17.0 (0 = if all dip switches of the coupler are in the OFF position). When all dip switches are in the ON position, the IP address is 172.16.17.255.

The modification of the last digit of the IP-address through the dip switches becomes effective, when switch 9 and 10 are in the OFF position. The following tables gives you an overview of how to change the last position of the IP-address through the dip switches No 1-8.

Dip Switch No.	1	2	3	4	5	6	7	8	9	10	
Value when Switch in ON status	1	2	4	8	16	32	64	128			
Example 1	ON	ON	ON	OFF	OFF	OFF	OFF	OFF			IP
Last digit of IP	1	2	4	0	0	0	0	0			172.16.17 7
Example 2	ON	ON	ON	ON	ON	ON	ON	ON			IP
Last digit of IP	1	2	4	8	16	32	64	128			172.16.17 255
Example 3	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF			IP
Last digit of IP	0	0	4	8	0	0	0	0			172.16.17 12

[5]

The new settings of the dip switches become effective after power OFF / ON and a new startup of the bus coupler.

If you need to reset the bus coupler to the factory settings, the following steps are required:

- ▶ Power off the bus coupler and remove all IO terminals
- ▶ Connect only end terminal KL9010 to the coupler
- ▶ Change all dip switches to the ON position
- ▶ Apply the 24 V DC power to the coupler
- ▶ After successful reset of the settings, LED *ERROR* and LED *I/O RUN* and LED *I/O ERR* are flashing
- ▶ After that you can power on the system and carry on with your software and hardware configurations




Tip

If you like to define any IP address for the coupler, you need to refer to the Beckhoff manual. One useful tool is Beckhoff's BootB server.

3.4.2 Enable / disable watchdog

The watchdog is a safety mechanism. When the LAN connection between PC and bus coupler is lost, the Beckhoff hardware is detecting the disconnection and is automatically switching analog and digital output terminals into the save status (ZERO value) to shut down actuators or emergency stops. In the default configuration, when a new coupler is created, the watchdog is activated (boxes checked).

However, there may exist applications, where it is useful to deactivate the watchdog for example when short network disconnections can be expected. When the watchdog is deactivated, the BK system behaves in a way that the terminals keep the analog or digital output value when the Ethernet communication to the PC is disconnected.

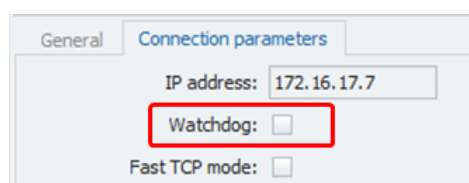

[6]



Information


Beckhoff recently changed the firmware and the behaviour of the watchdog for the analog input terminals KL3062. When the Modbus TCP interface is used to communicate with the bus coupler, the watchdog is already activated and the KL3062 run LED is not active. If you like to activate the LEDs to show the run status of KL3062, the watchdog check box should be deactivated. Please note: The analog input terminals KL3062 are measuring correctly even though the LEDs are showing the inactive status.

3.4.3 Fast Mode (only for coupler BK9000)

The fast mode check box can only be enabled for the BK9000 bus coupler. Compared to the other BK couplers, this device supports higher sample rates of up to 100 Hz. The sample rate is a global setting and is applied to all channels of the system.

3.5 Automatic reconnect to the bus coupler


The PlugIn is supporting an auto connect function and tries to reconnect to the coupler in case the communication was stopped. If the connection (coupler –PC) is reestablished, the system continues with the measurements of input terminals and operation of the output terminals.

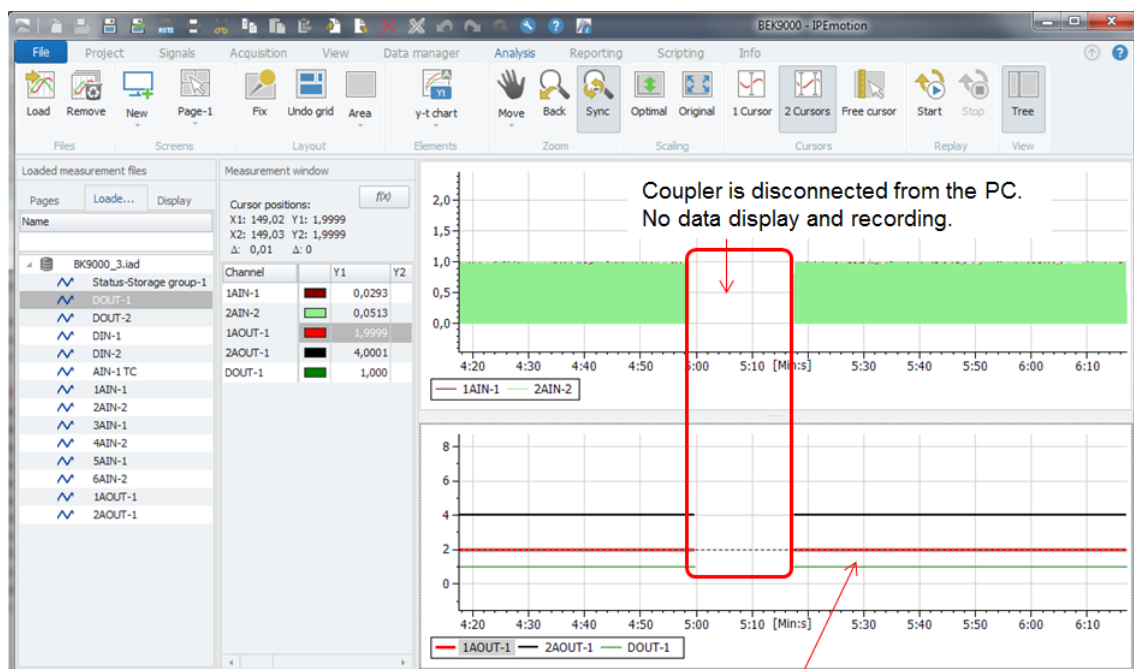

The PlugIn has automatic reconnect function to [7] reestablish a communication to the coupler.

3.6 Adding IO terminals to the coupler

After creating the interface device (bus coupler), the IO terminals must be created. The order of the IO terminals in IPEmotion must match exactly the same order of the IO terminals and power input terminals used by the hardware setup. The physical order of the IO terminals is reflecting the Modbus address structure and the PlugIn is automatically reading the correct values from the different terminals.

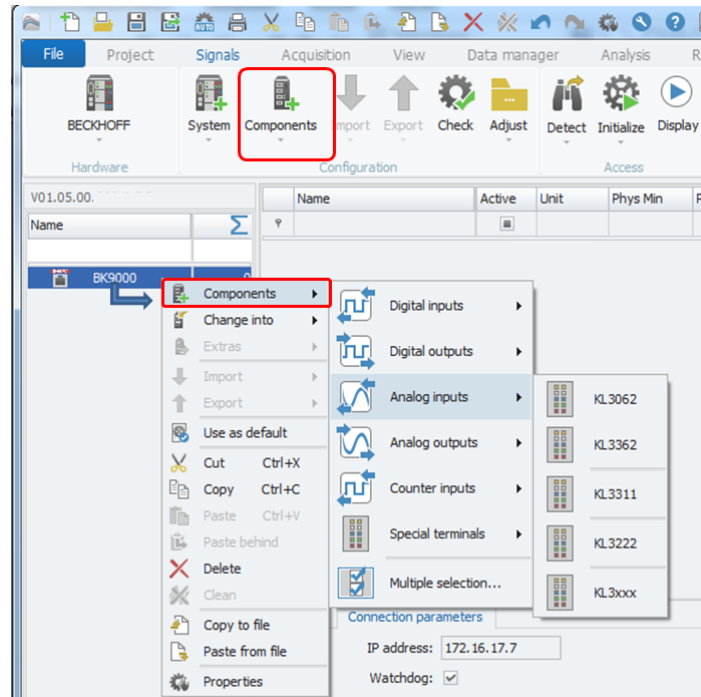

Add IO terminal from the ribbon or from the context menu of the coupler. [8]

The following screen shot shows a complete system with several IO terminals.

Name	Active	Unit	Phys Min	Phys Max	Sensor Min	Sensor Max	Sampling rate
DIN-1	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-2	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-1	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-2	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-3	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-4	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-5	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-6	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-7	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-8	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-1	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
DIN-2	<input checked="" type="checkbox"/>		0	1	0	1	10 Hz
AIN-1	<input checked="" type="checkbox"/>	V	-5,0000	5,0000	-5	5	10 Hz
AIN-2	<input checked="" type="checkbox"/>	V	-5,0000	5,0000	-5	5	10 Hz
CNT-1	<input checked="" type="checkbox"/>		0	65535	0	65535	10 Hz
CNT-2	<input checked="" type="checkbox"/>		0	65535	0	65535	10 Hz

[9]




Information

The IO terminals must be initially created in the right order as used by the hardware setup. It is misleading to use a sorting function to bring the modules in the same order as used in the HW setup e.g. by renaming the IO terminals.


It is recommended to including the end terminal KL9010 in the IPEmotion process structure. For the Modbus addressing point of few it is not necessary to include the end terminal. The measurement will work correctly without an end terminal in the IPEmotion configuration.

3.7 Removing vs Deactivating IO Terminals

If your hardware configuration is changing, e.g. terminals are physically removed you need to **delete** these terminal from the IO list also. The Modbus addresses are only updated when the IO terminals are deleted. When you **deactivate** an IO terminal, the address mapping remains and only the measurement of these inputs is deactivated.

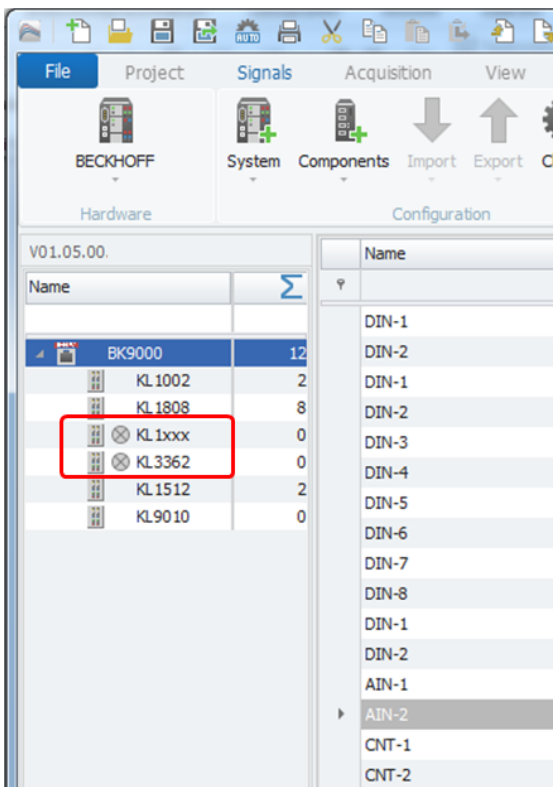

Deactivating Terminals:
Is not changing the Modbus adress range
> Impact: no measurement of the inputs.

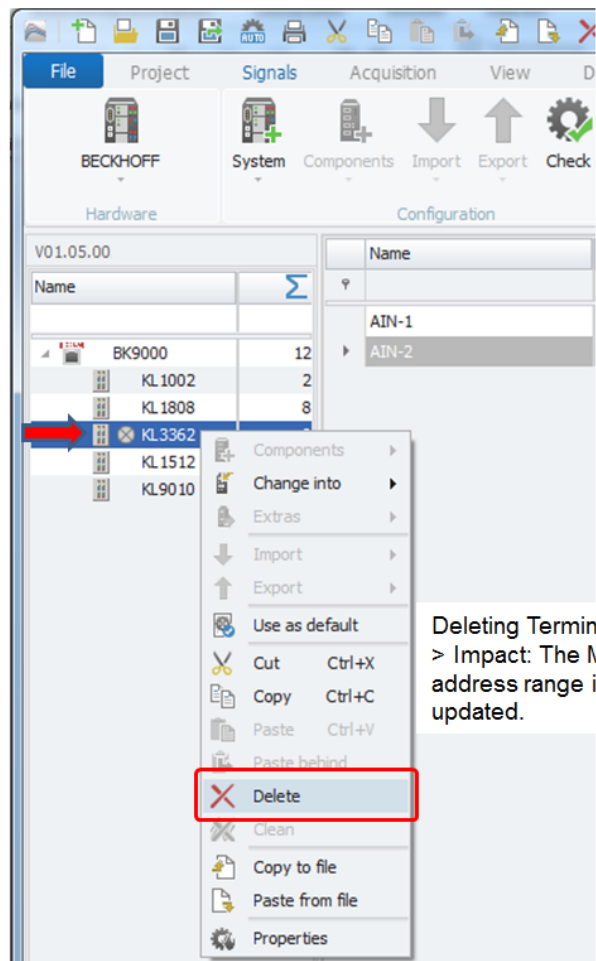


Deleting Terminals:
> Impact: The Modbus address range is updated.

[10]

3.8 Channel Scaling

For the channel scaling you select a channel and switch to the SCALING tab sheet. In this tab sheet you can scale all analog and digital input and output channels. Basic scaling operations can be defined directly in the tab sheet by entering the physical range (engineering units) to the system. However, if you need a more sophisticated scaling input with factor offset- scaling or self-developed linearization tables you may use the Scaling calculator.

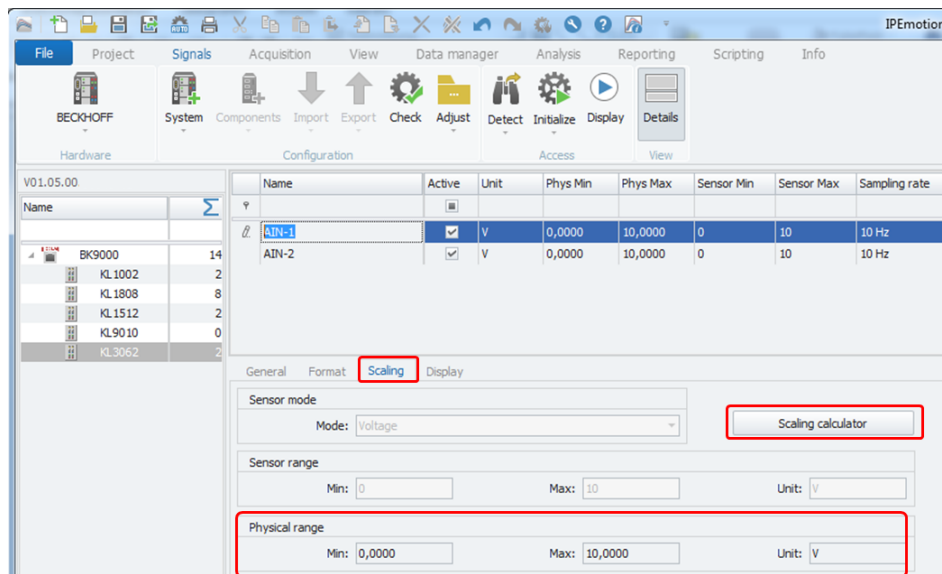


Define scaling for engineering units.

[11]

3.9 Supported KL IO Terminals

This PlugIn version supports the following KL IO terminals. The list of terminals is growing along with new customer projects.

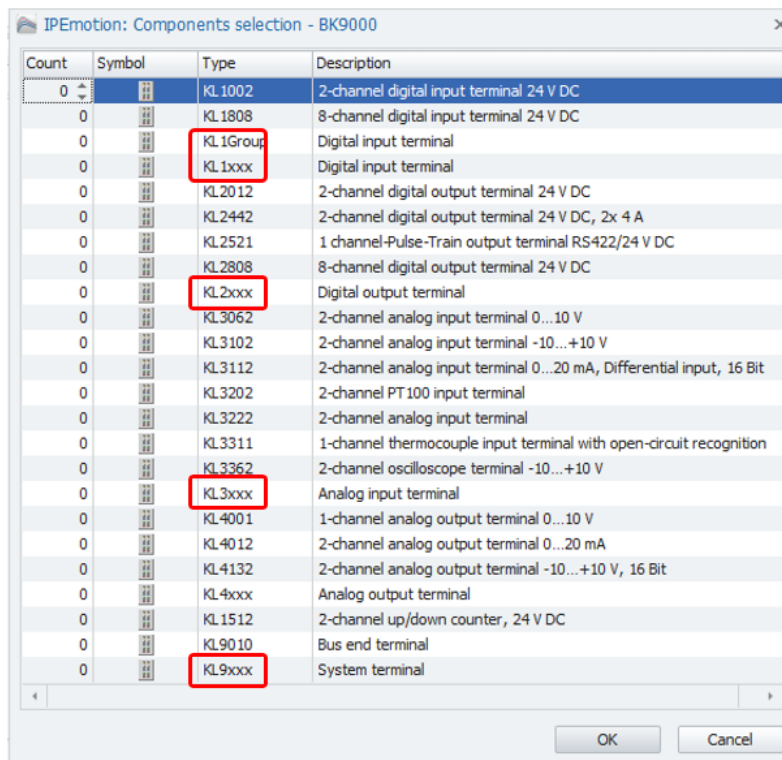

[12]

The terminals indicated with the red arrow e.g. **K1xxx, KL2xxx etc...** are generic terminals which can be used to create new terminals using a generic template. The concept is explained below.

3.10 Configure generic IO terminals – Example KL 3172

Beckhoff offers a large range of IO terminals and not all terminal types are implemented in the PlugIn, yet. However, the PlugIn provides generic terminals which give users the possibility to create their own terminals individually.


- ▶ K 1Gxxx This is a group terminal for multiple DIG IO
- ▶ KL 1xxx Generic Digital input terminal
- ▶ KL 2xxx Generic Digital output terminal
- ▶ KL 3xxx Generic Analog input terminal
- ▶ KL 4xxx Generic Analog output terminal
- ▶ KL 9xxx Generic special terminal

If a specific terminal is missing in the PlugIn you can create a terminal from the five main IO terminals by your own. In the following example a two channel high precision analog input terminal (KL 3172) with a 0 - 2 Volt measurement range is created.



Information

Not all IO terminals can be created through the generic templates. If you require a special IO terminal please contact IPETRONIK for support.

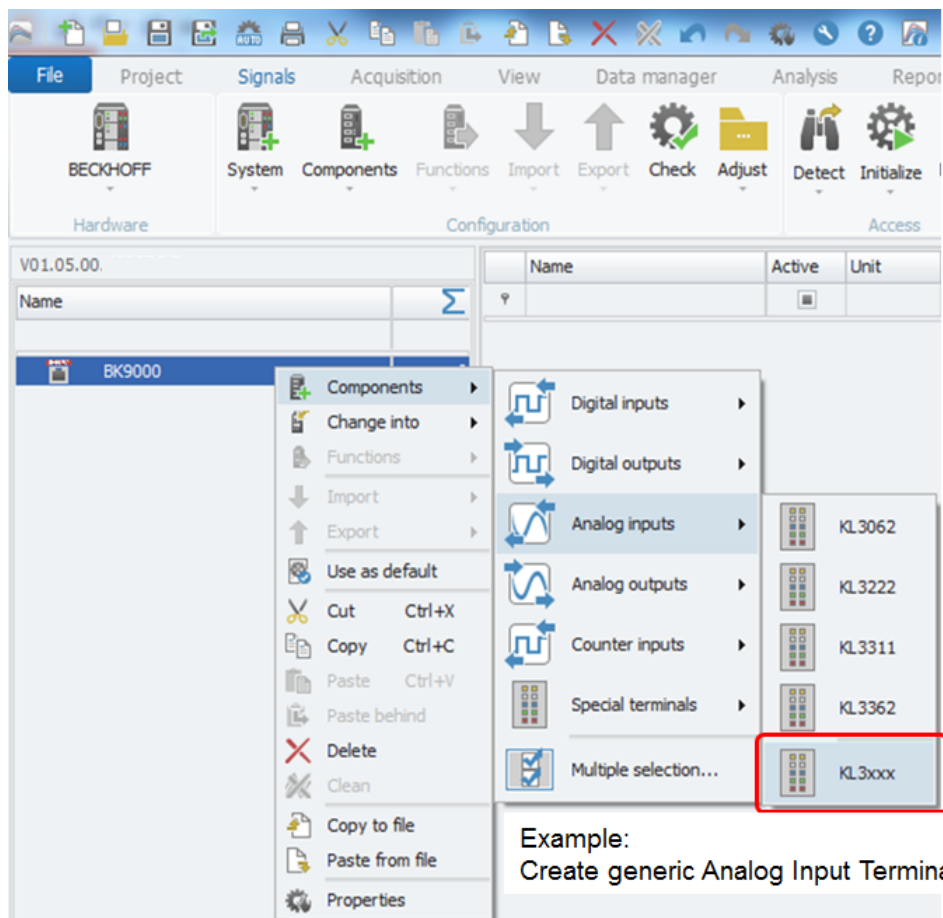



[13]

After creating a generic input terminal KL3xxx, the analog input channels need to be created. The KL 3172 has 2 analog inputs. Therefore, 2 input channels are created.



Information

Even if you like to measure only one input e.g. of KL3172, it is still required to create as many channels (2 inputs) on the software side as provided by the terminal in order to set up the correct Modbus address register.

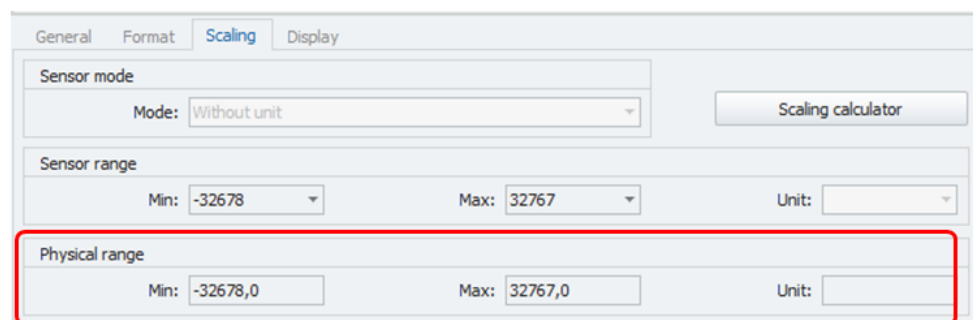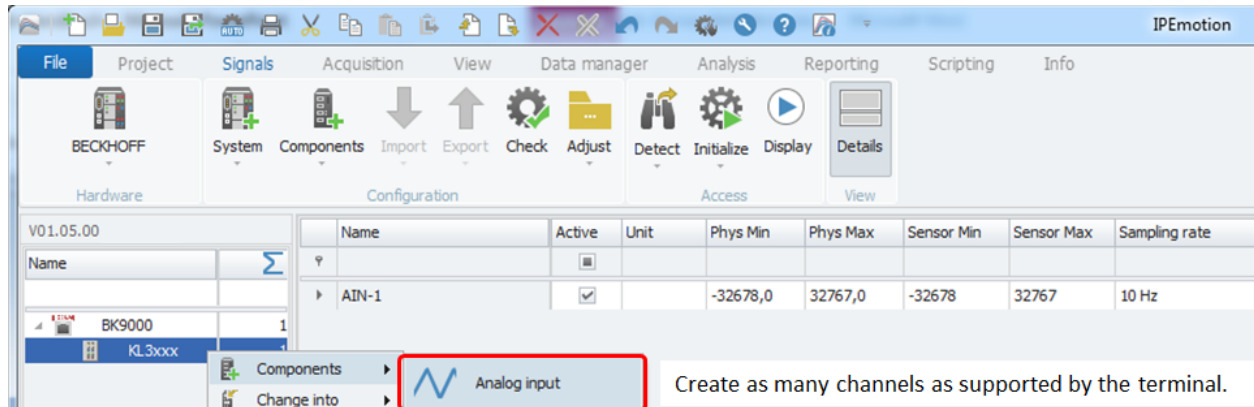

The sensor scaling is very important. Here you need to refer to Beckhoff's technical documentation of the terminal.

[14]

In the final step the channel scaling has to be defined. For the correct channel scaling you need to refer to the technical manual of the terminal to see the decimal values of sensor range and the physical range. For KL3172 the decimal range of a 0 - 2V measurement is: 0 – 65535.

infosys.beckhoff.com/index_en.htm

DEV IPETRONIK ZEUS WebServices Home < IPEmotion VidyoConferencing IP Home | IPETRONIK G... Anmelden - Cisco We... Filter: All open cases in... Meist

BECKHOFF New Automation Technology **Beckhoff Information System**

Search Home Contact www.beckhoff.com email this page [Select language]

Start Page
News
Industrial PC
Embedded PC
Fieldbus Components
Start Page
Bus Coupler
Bus Terminal Controller
Bus Terminals
Overview
KL2531, KL2541 - Stepper motor terminals
KL2535, KL2545 - Pulse width current termin...
KL2532, KL2552 - DC motor power stages
KL2692 - Watchdog Terminal
KL2751, KL2761 - Dimmer terminals
KL2784, KL2794
KL2791 - Motor speed controller terminal
KL31x2 - Accurate analog terminals
Foreword
Product overview
KL3132, KL3162, KL3172, KL3182
KL3142, KL3152
Basic function principles
LEDs

Analog values are represented as follows:

Input Signal	KL3142-0000	KL3152-0000	KL3162-0000	KL3172-0000	KL3172-0500	KL3172-1000	Value decimal	hex
0 mA	4 mA	0 V	0 V	0 V	0 V	0 V	0	0x0000
20 mA	20 mA	10 V	2 V	500 mV	1 V	1 V	65535	0xFFFF

Input Signal	KL3132-0000	KL3182-0000	Value decimal	hex
-10 V	-2 V	-32768	0x8000	
+10 V	+2 V	+32767	0x7FFF	

Calculation

The terminal continuously takes measurement readings and stores the raw values of its A/D converter in register **R0** (RAM). After each recording of the analog signal, a correction is calculated using the compensation and, if necessary, calibration values. This is followed by manufacturer and user scaling:


$Y_A = (X_{ADC} + B_A) \times A_A$	(1.0)	Manufacturer compensation (if calibration inactive)
$Y_A = ((X_{ADC} + B_K) \times A_A) \times (A_{GK} / A_K)$	(1.1)	Manufacturer compensation / calibration (if calibration activated)

[15]

As you can see from the scaling calculator above, the IPEmotion default scaling of the generic KL3xxx terminal is -32.678 – 32.767 and this not matching to the required scaling of the KL 3172 terminal.

Physical value KL 3172	Decimal value of KL 3172	IPEmotion default scaling of KL 3xxx
0 Volt	0	-32.678
2 Volt	65.535	32.767

In order to scale this terminal correctly the scaling mode “**Free 2-point scaling**” is required. The scaling is defined for the ordinate (x-axis) in the range of the KL3172 IO terminal from 0 - 65.535. The physical value (y-axis) is configured according to the input measurement range of 0 - 2 Volt.

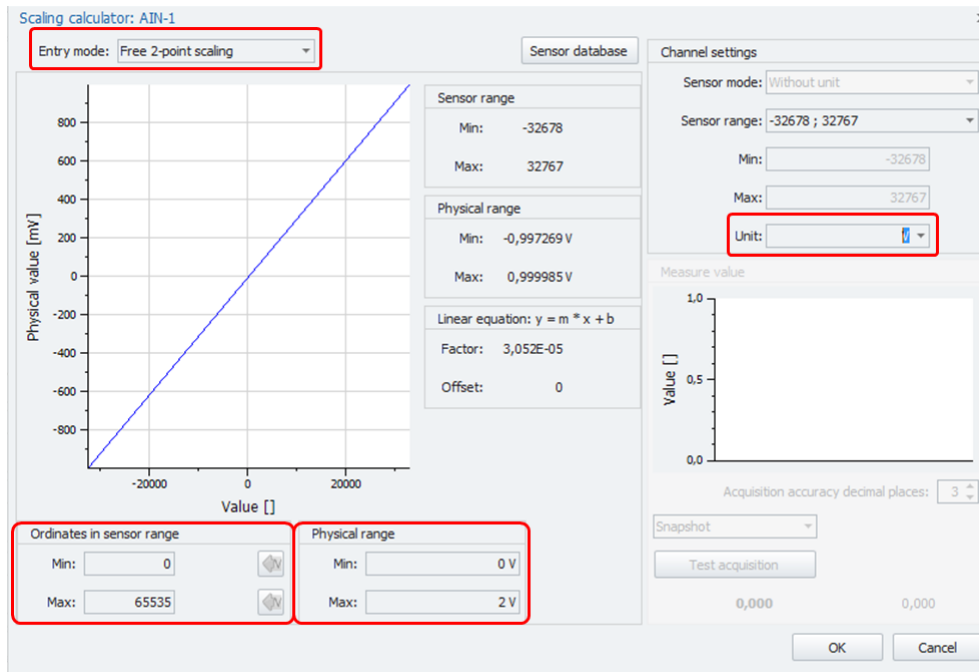


[16]

3.11 Konfiguration information for special terminals


3.11.1 Terminal KL 3362 – Oscilloscope terminal

This terminal is a 2 channel oscilloscope terminal which is designed for dynamic data acquisition applications. The results you will measure in IPEmotion are depending on the measurement mode of the terminal. The measurement mode is defined through the **Beckhoff KS2000** software. The functions of the terminal are not discussed in this document. See here for Beckhoff's technical documentation.

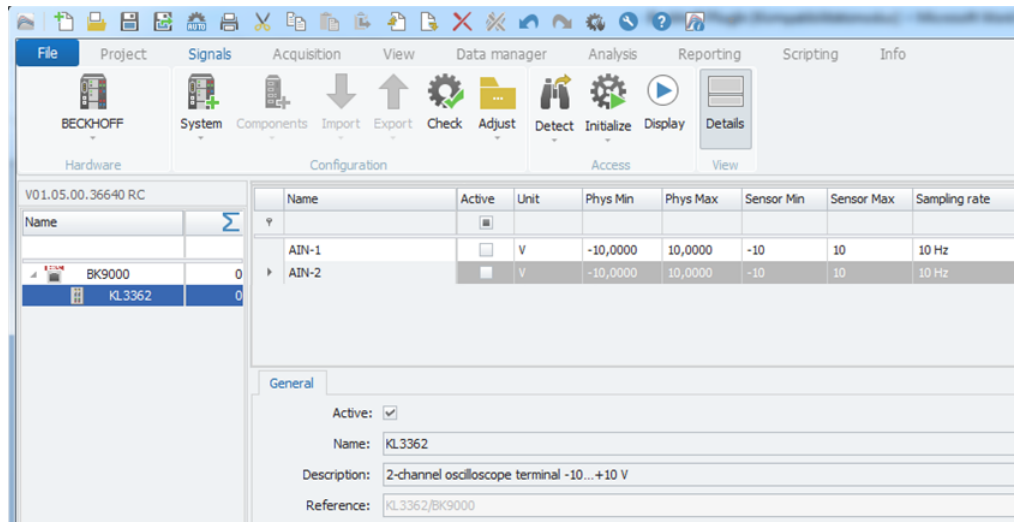


[17]

General settings is dealing about sample rate the overall trigger mode.

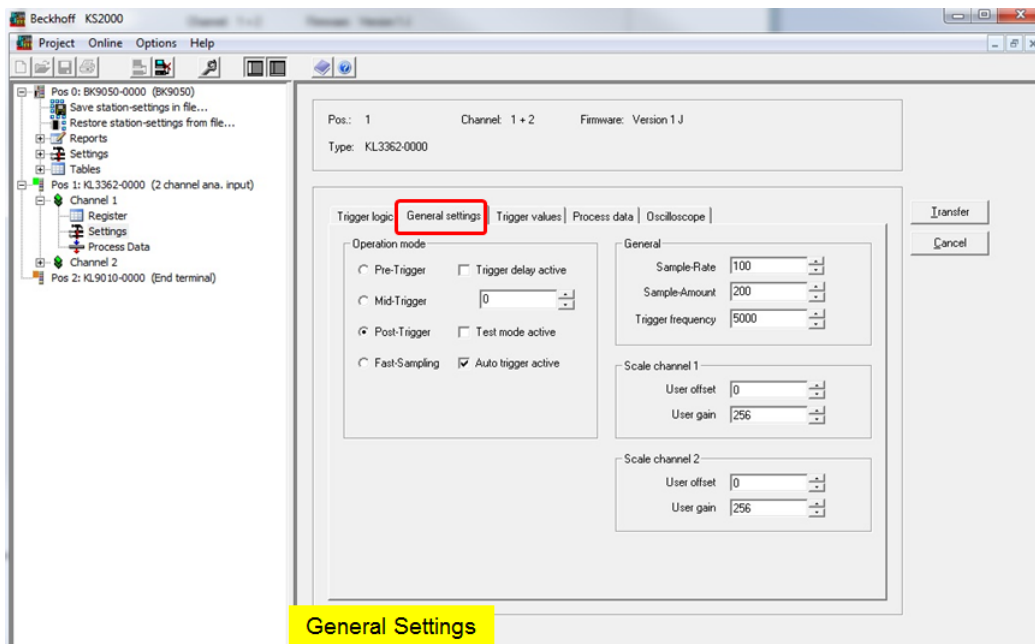


[18]

Define the trigger logic.

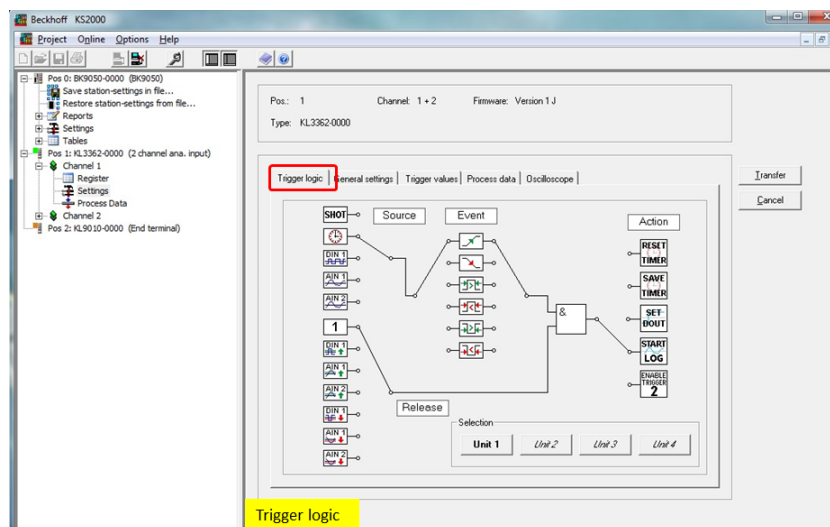

[19]

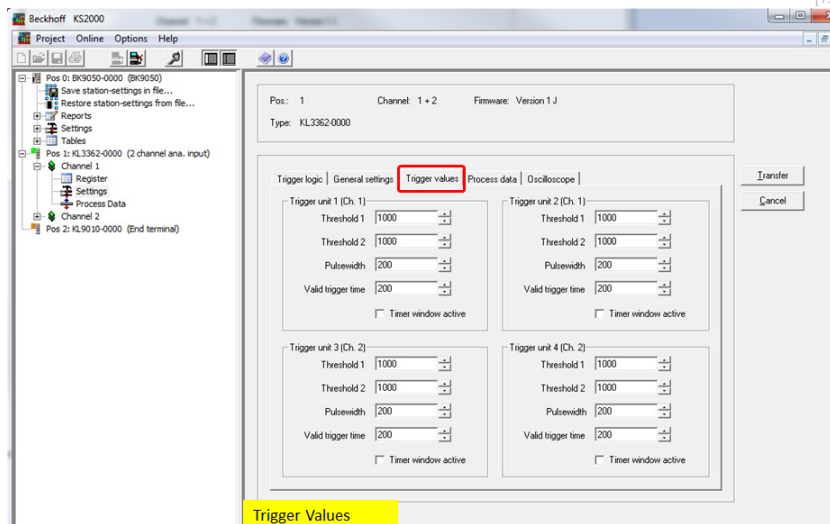


[20]



Information

This KL 3362 is operating and updating the values only cyclically when the correct trigger logic as indicated above is configured.

Define measurement mode.

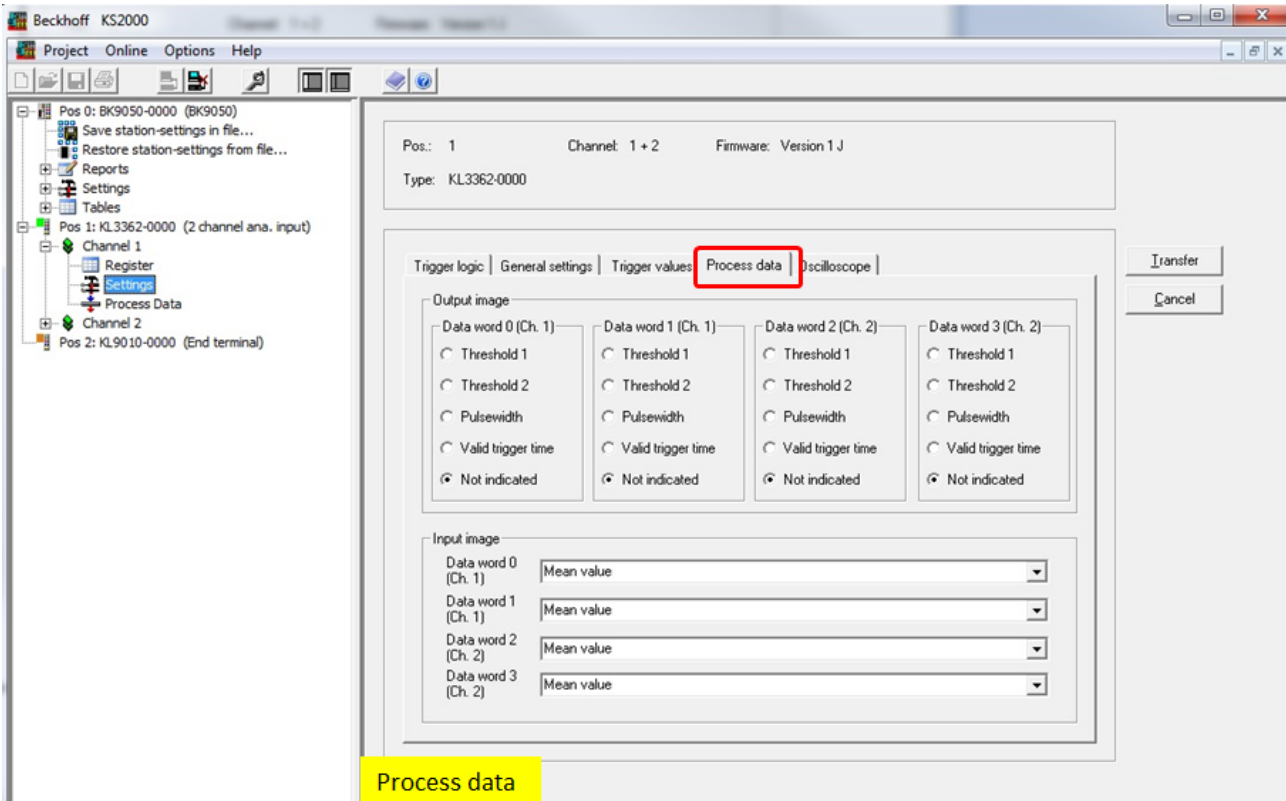

[21]


The terminal is supporting different measurement modes like:

- ▶ Peak value
- ▶ Min value
- ▶ Average
- ▶ True RMS
- ▶ Etc. . .

Depending on the settings defined here you will get the result transferred to IPEmotion.

3.11.2 Terminal KL 3222 – Resistance measurement (Ohm)

This is a 2 channel input terminal is generally designed for resistance measurement (Ohm) and RTD (Pt100, etc.) temperature measurements. The terminal is currently configured for Ohm measurement only. You can change with the KS2000 software the Ohm measurement range from 0-5000 Ohm or 0-1200 Ohm. If you like to measure RTD temperatures with this terminal, a modification of the PlugIn is required. Please contact IPETRONIK support.

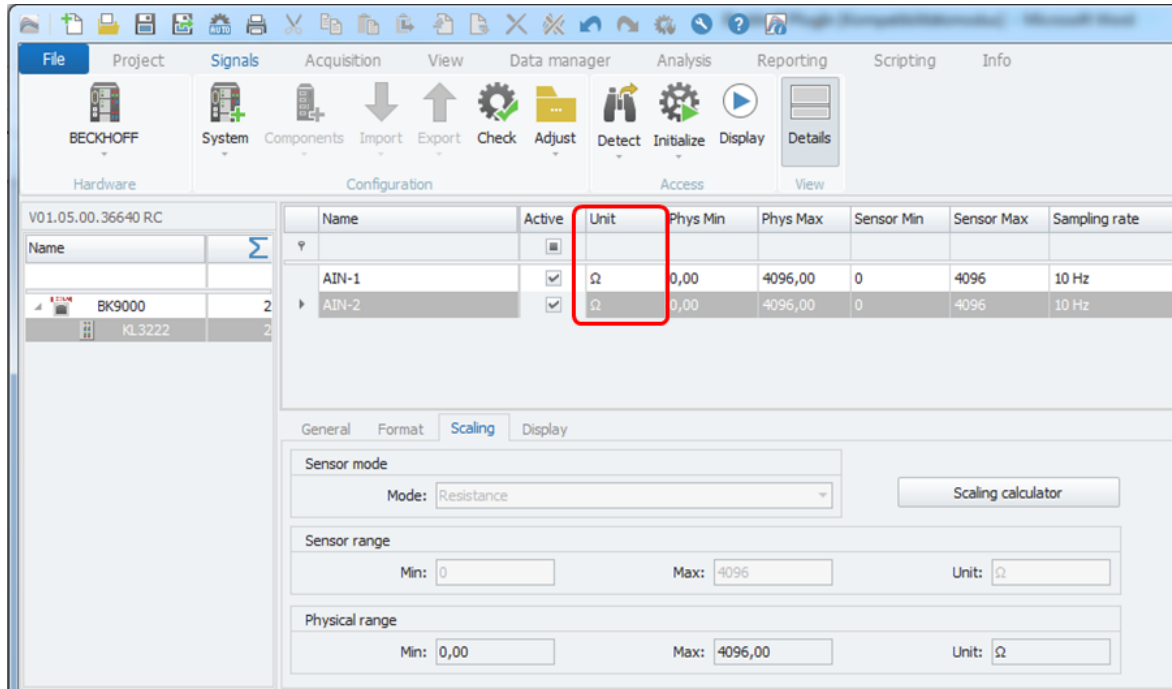


Resistance measurement (Ohm)

[22]

3.11.3 Terminal KL 3311 – Thermocouple measurement

This 1 channel input terminal is supporting thermocouple temperature measurement for TC types J, K, L, B, E, N, R, S, T, U and mV measurement. The factory default setting is the measurement of Thermocouple type K. You can change with the KS2000 software the thermocouple type.

This terminal is currently not supporting **mV** measurements in IPEmotion. If you like to measure mV a new version of the PlugIn required. Please contact IPETRONIK support.

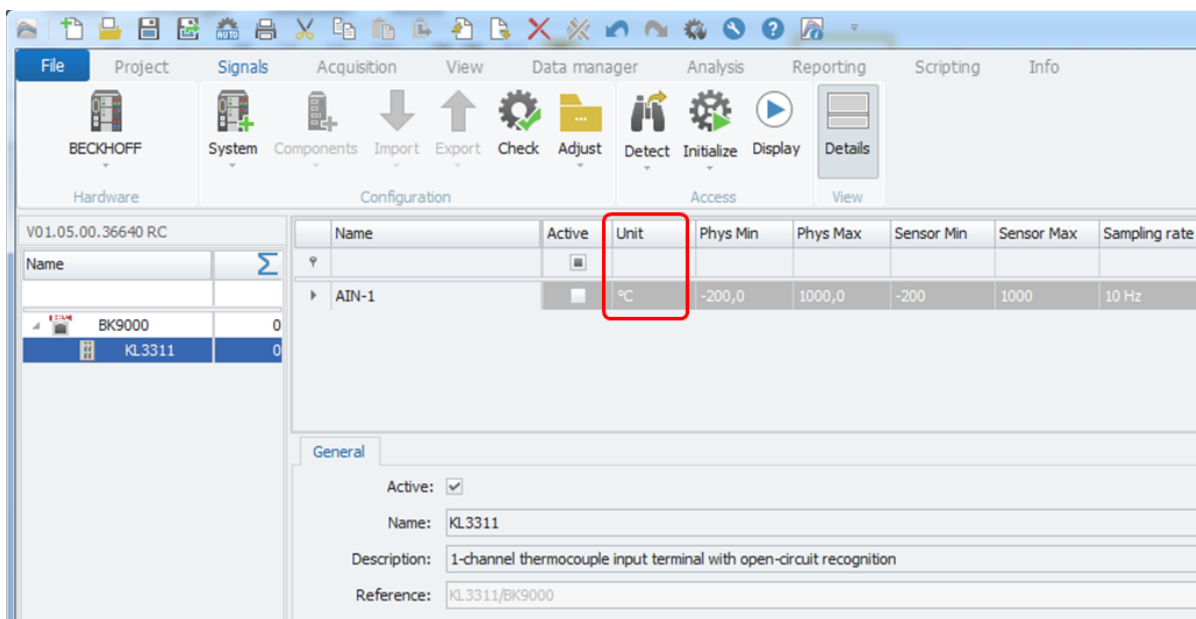


Thermocouple temperature measurement (°C)

[23]

3.11.4 Terminal KL 1512 – 16 bit counter input

This digital 2 channel pulse counter input terminal is designed for pulse counting. The counter is 16 bit. After 65.535 counts the counter is starting from 0 again.

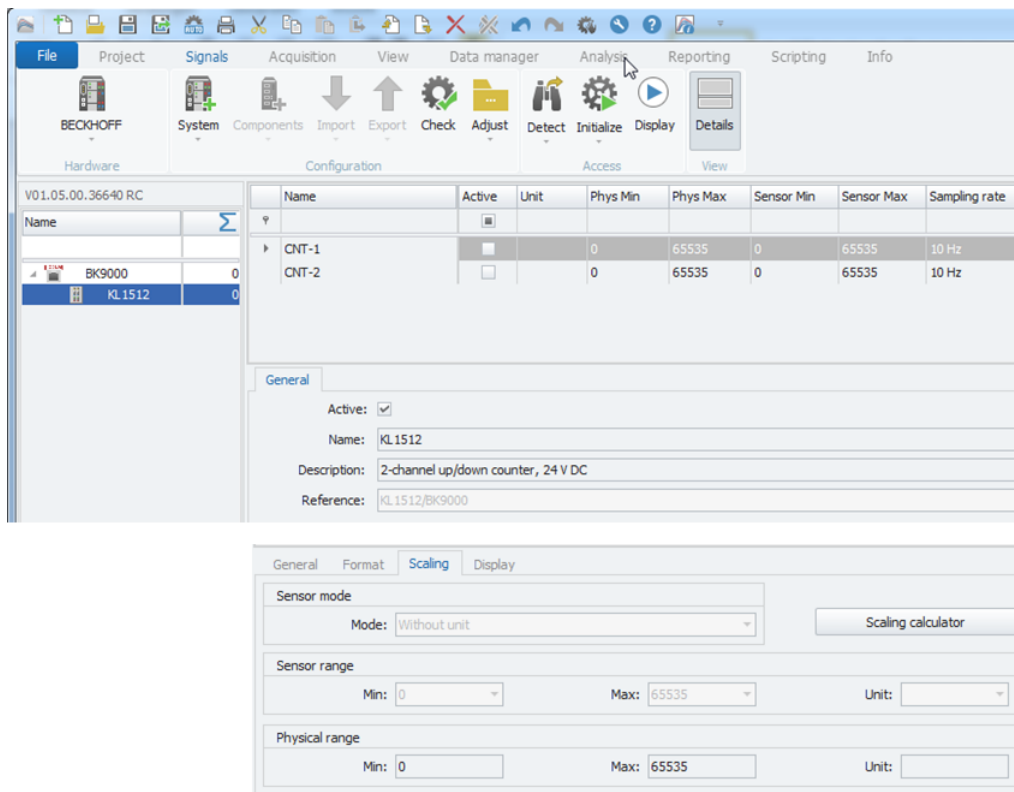

16 bit = 65.535 Counter input terminal.

[24]

3.11.5 Application example Pulse counting – Flow Rate & Volume totalizer

The following example will show how to use IPEmotion Math functions to count overall water consumption. The customer used the e.g. the sensor from İDEA-VORTEX"flow meter which gives pulse outputs proportional to the flow rate.

For flow rate applications the following inputs are usually required:

- ▶ Online flow rate (ml/s)
- ▶ TOTAL Volume (ml)

The current online flow rate is computed with the following formula:

- ▶ $\text{DIFF}(\text{"Counter x"})$ (see definition of **Counter_x** formula below)
- ▶ **Active** Checkbox to active Global monitoring channels
- ▶ **Name** Define an individual name of the Global system
- ▶ **Description** Define an individual Global description
- ▶ **Reference** Is automatically created by the system and is included in the storage data
- ▶ **Sample rate** The sample rate is configured in the channel grid and is ranging from 1/h,


The TOTAL Volume can be calculated through the following formula:

- ▶ **TOTAL Volume [ml]:** $(\text{"Counter_x"} + \text{"Resets_Cx"}) * \text{SSensorFlowRate_Const y}$
- ▶ **x:** Is the ID of the channel (1 input one of the terminal, or 2).
- ▶ **y:** Is the ID for the constant of the sensor in used indicating how much volume [ml] are related to one pulse.(8, 10, 15, 20 or 25 ml).
- ▶ **Counter_x** Is the actual value from the counter terminal. The current value is calculated by the following term using the VALID formula in order to overcome the "NoValue" reading when the terminal is reset from 65535 back to zero. During the reset procedure a "NoValue" is transferred to IPEmotion. $\text{Counter_x} = \text{IF}(\text{VALID}(\text{"CNT-x"}); \text{"CNT-x"}; 0)$
- ▶ **Resets_Cx** This is a logic condition to ensure that the counter keeps counting (totalizing) even if the counter input passed its overflow is starting from zero all over. When the counter has reached 65.535 ticks the terminal is starting from zero all over again. $\text{Resets_Cx} = \text{IF}((\text{VALID}(\text{"Resets_Cx"})); \text{IF}(((\text{"Counter_x"} < \text{PREV}(\text{"Counter_x"})) \text{ AND } (\text{"Counter_x"} = 65535)); \text{"Resets_Cx"} + 65535; \text{"Resets_Cx"}); 0)$
- ▶ **SensorFlowRate_Const y** This is the constant flow rate of the sensor and depending of the diameter of the sensor. In the example the sensor flow rates per pulse.

DM 8:	0,56 ml/pulse	8mm diameter
DM 10:	1,40 ml/pulse	10mm diameter
DM 15:	3,09 ml/pulse	15mm diameter
DM 20:	6,22 ml/pulse	20mm diameter
DM 25:	12,40 ml/pulse	25mm diameter


Screenshots from a IPEmotion demo project: Available on request from IPETRONIK support.

SIGNALS: Counter input channels of a Beckhoff terminal.

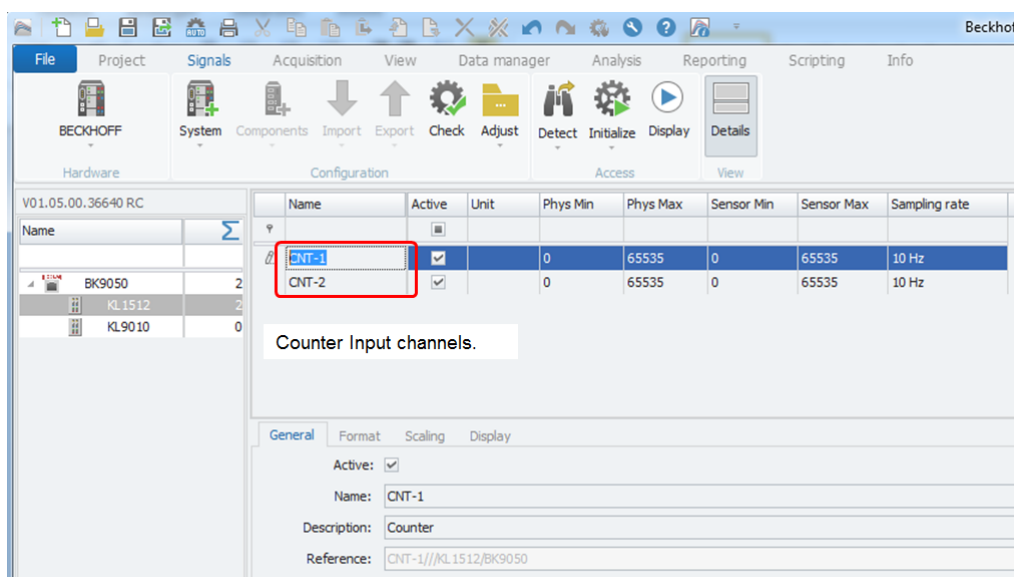

[25]

ACQUISITION: Variables to accommodate the sensor constants of the flow rate.

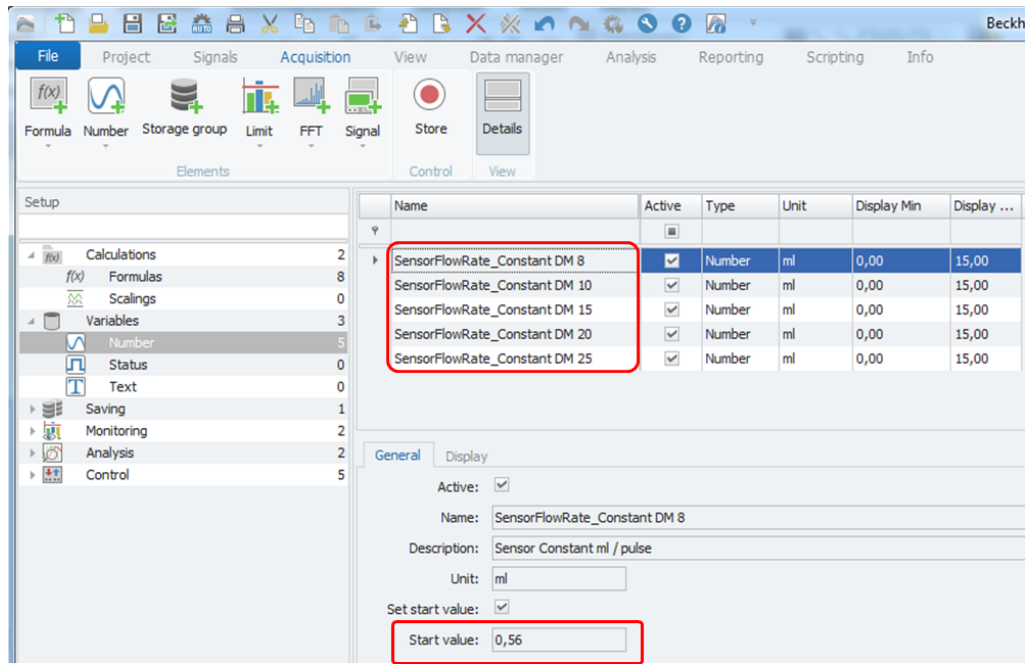

Flow sensor constant [ml/pulse]

[26]

You will find the flow rate [ml/pulse] in the sensor data sheet. See extract below:


Sensor model / diameter

Flow sensor constant [ml/pulse]

Kennlinieformel:	Frequenzausgang		Menge pro Puls
	Kennlinie	Frequenzbereich	
DN 8	$Q = 0.0350 * f - 0.3$	~ 34 ... 437 Hz	~ 0.56 ml
DN 10	$Q = 0.0845 * f - 0.2$	~ 24 ... 382 Hz	~ 1.40 ml
DN 15	$Q = 0.1870 * f - 0.2$	~ 19 ... 269 Hz	~ 3.09 ml
DN 20	$Q = 0.3730 * f - 0.3$	~ 14 ... 229 Hz	~ 6.22 ml
DN 25	$Q = 0.7440 * f - 0.2$	~ 12 ... 202 Hz	~ 12.40 ml

[27]

ACQUISITION – Overview of math and logic functions

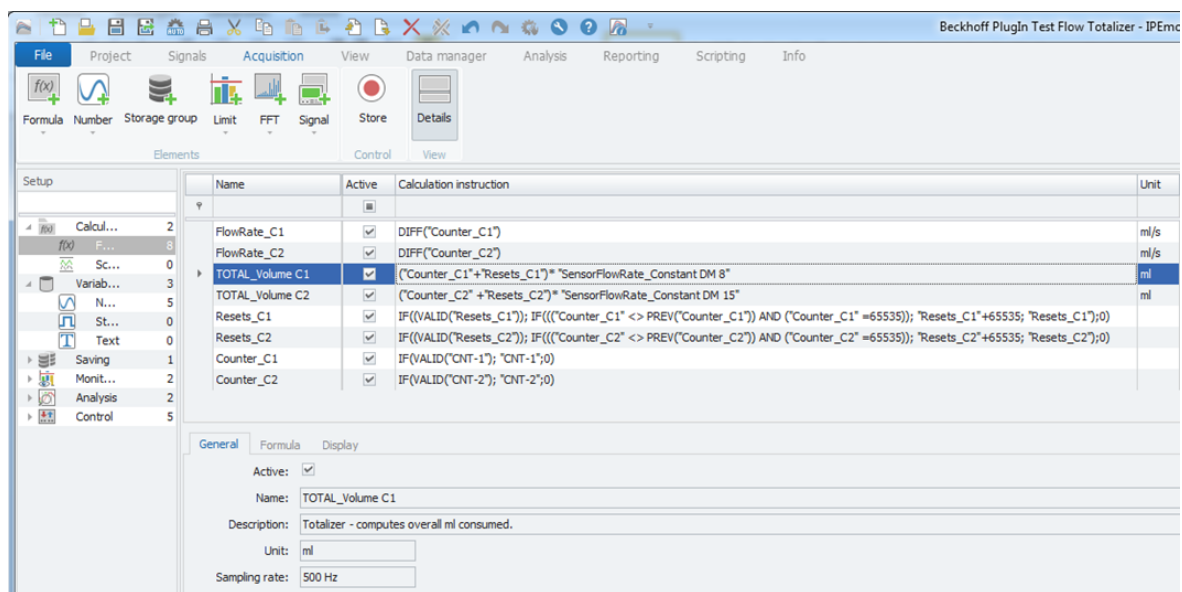


[28]

4 EtherCAT interface

4.1 System architecture


The PlugIn is also supporting the direct data communication to Beckhoff CPU systems. For this architecture the ADS or R3IO interface is used to get the measurements from the Beckhoff CPU system integrated to IPEmotion.

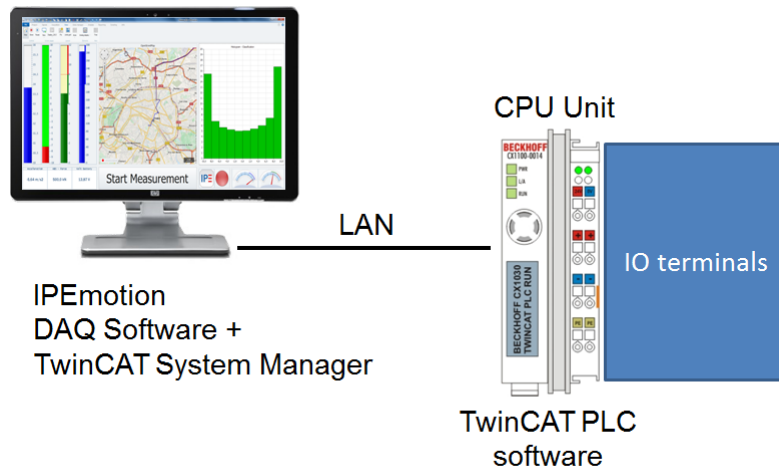

[29]

4.2 TwinCAT - Beckhoff CPU configuration

On the CPU (e.g. CX1100) all the IO terminals are configured using the TwinCAT System Manager software. The IO terminals are listed exactly in the same order as they are physically connected to each other.

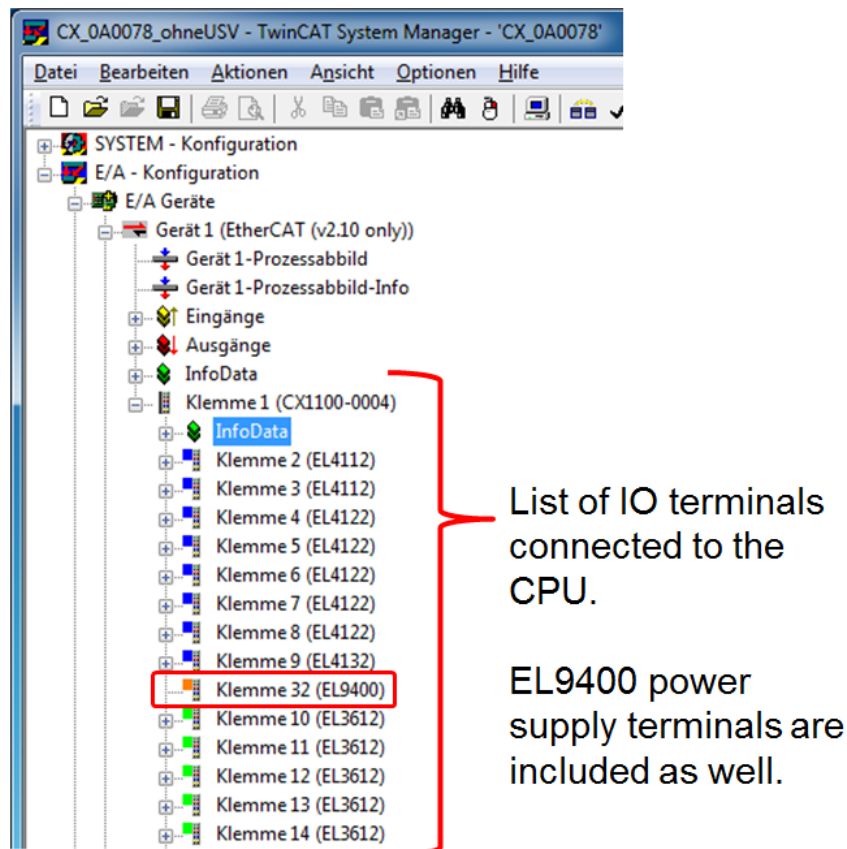

[30]

4.3 TwinCAT – Task configuration

In order to setup a data communication between the Beckhoff CPU and the IPEmotion PC a separate TwinCAT System manager installation on the IPEmotion PC is required. In this TwinCAT System Manager a new process task is defined which included all or only a subset of IO terminals you like to interface to IPEmotion.

The image shows two screenshots from the TwinCAT System Manager and IPEmotion software. The left screenshot shows the 'SYSTEM - Konfiguration' window with a list of IO terminals (In1_Ch1 to In9_Ch1) under 'Zusätzliche Tasks'. A red box highlights 'Task 1' and a red arrow points to the 'List of IO terminals included in Task 1.' label. The right screenshot shows the 'Task 1' configuration window with 'Name: Task 1' and 'Port: 301'. A blue box highlights the 'Port: 301' field, with a blue arrow pointing to the 'Define Task & Port Number' label. Below this, the 'Connection parameters' window shows 'Port: 301' in a blue box, with a blue arrow pointing to the 'Connect to Port: 301 of Task 1' label. A red bracket in the IPEmotion screenshot indicates the 'Same IO terminal order between Task 1 & IPEmotion'.

Define Task & Port Number


List of IO terminals included in Task 1.

Same IO terminal order between Task 1 & IPEmotion

Connect to Port: 301 of Task 1


On the IPEmotion side the whole IO structure of the task needs to be created, as well. The interface between IPEmotion and the Task is established over the Port number.

A nice function of the TwinCAT System Manager is that IO terminals can be allocated to several task classes which are related e.g. to different sample rates. When you have defined several task classes with individual port numbers these task classes can be integrated into IPEmotion.

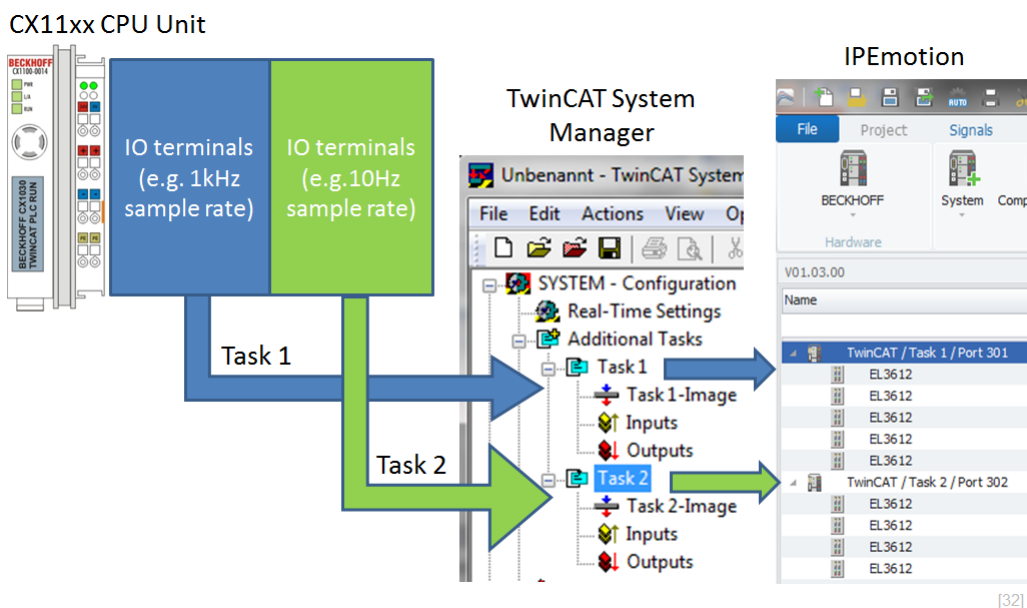

4.4 Supported EtherCAT IO Terminals

This PlugIn supports the following EL IO terminals. The list of terminals is growing along with customer projects and new requirements.

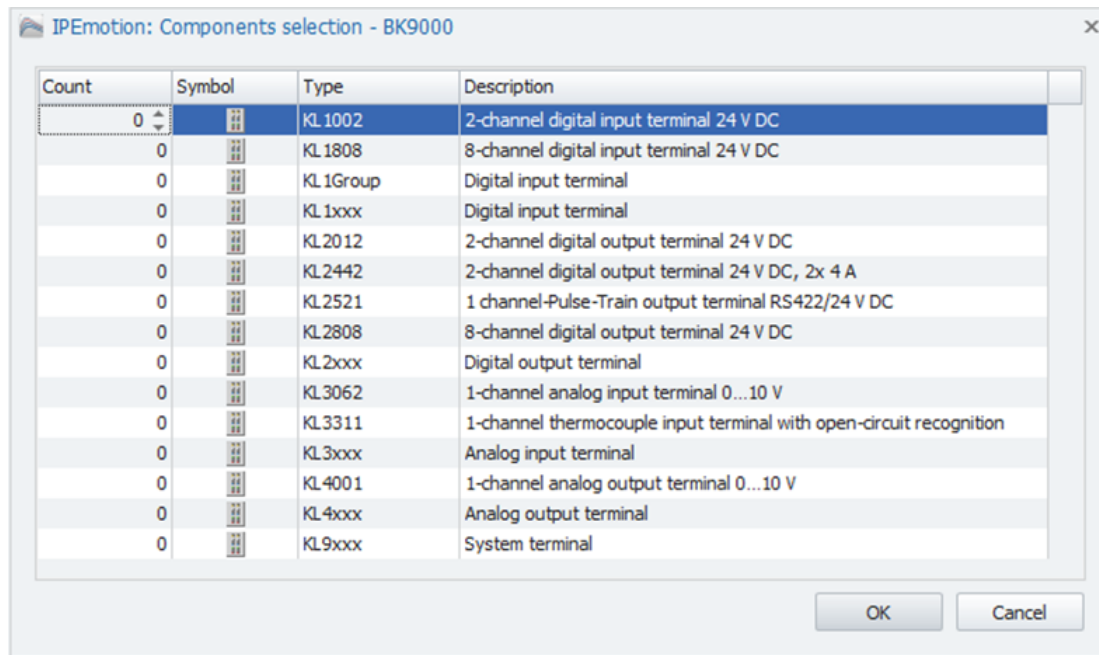

[33]

4.4.1 Adding generic IO terminals – from template terminals

Beckhoff offers a large range of IO terminals and not all terminal types are yet implemented in the PlugIn. However, the PlugIn provides generic terminals which give users the possibility to create their own terminals, individually.

- ▶ EL 1xxx Generic Digital input terminal
- ▶ EL 2xxx Generic Digital output terminal
- ▶ EL 3xxx Generic Analog input terminal
- ▶ EL 4xxx Generic Analog output terminal
- ▶ EL 9xxx Generic special terminal

Creating a new terminal over the templating process is working with EtherCAT terminals in the same way as discussed in chapter 3.




Information

Not all IO terminals can be created through the generic templates. If you require a special IO terminal please contact IPETRONIK for support.

5 Starting Measurement

In order to start measurement and to test the communication you just need to run the start display button. The online measurements are directly displayed.

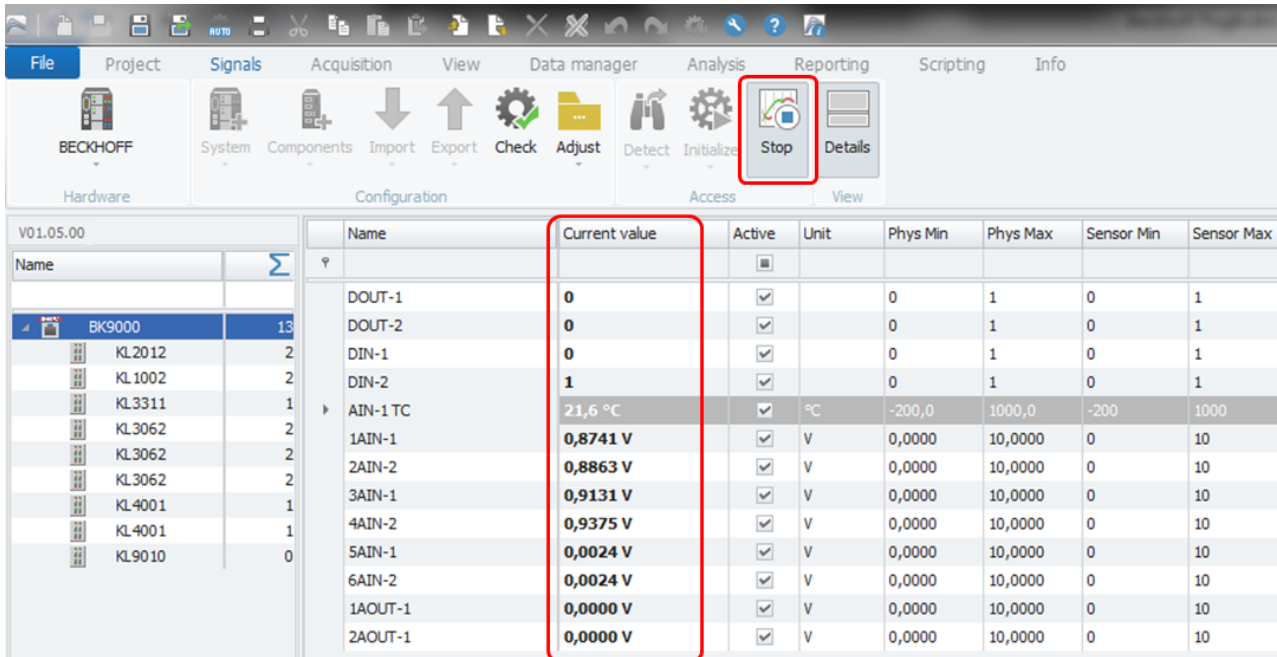

The screenshot shows the IPEmotion software interface. The top toolbar has a 'Stop' button highlighted with a red rectangle. Below the toolbar, there is a table of online readings. The table has columns: Name, Current value, Active, Unit, Phys Min, Phys Max, Sensor Min, and Sensor Max. The 'Current value' column is highlighted with a red rectangle. The table lists various digital and analog inputs and outputs, including DOUT-1, DOUT-2, DIN-1, DIN-2, AIN-1 TC, 1AIN-1, 2AIN-2, 3AIN-1, 4AIN-2, 5AIN-1, 6AIN-2, 1AOUT-1, and 2AOUT-1.

Name	Current value	Active	Unit	Phys Min	Phys Max	Sensor Min	Sensor Max
DOUT-1	0	<input checked="" type="checkbox"/>		0	1	0	1
DOUT-2	0	<input checked="" type="checkbox"/>		0	1	0	1
DIN-1	0	<input checked="" type="checkbox"/>		0	1	0	1
DIN-2	1	<input checked="" type="checkbox"/>		0	1	0	1
AIN-1 TC	21,6 °C	<input checked="" type="checkbox"/>	°C	-200,0	1000,0	-200	1000
1AIN-1	0,8741 V	<input checked="" type="checkbox"/>	V	0,0000	10,0000	0	10
2AIN-2	0,8863 V	<input checked="" type="checkbox"/>	V	0,0000	10,0000	0	10
3AIN-1	0,9131 V	<input checked="" type="checkbox"/>	V	0,0000	10,0000	0	10
4AIN-2	0,9375 V	<input checked="" type="checkbox"/>	V	0,0000	10,0000	0	10
5AIN-1	0,0024 V	<input checked="" type="checkbox"/>	V	0,0000	10,0000	0	10
6AIN-2	0,0024 V	<input checked="" type="checkbox"/>	V	0,0000	10,0000	0	10
1AOUT-1	0,0000 V	<input checked="" type="checkbox"/>	V	0,0000	10,0000	0	10
2AOUT-1	0,0000 V	<input checked="" type="checkbox"/>	V	0,0000	10,0000	0	10

Start measurement – online readings.

[34]

Author: FOT